
Manualslib.com - Easy to Read Manuals




V-TEK DF4 Intercom Monitor User Manual


Contents

1. Parts and function
2. Connections
3. Mounting
4. Installation Setup
    - 4.1. 1. Address setup
        - 4.1.1. By monitor menu
        - 4.1.2. By call activate
        - 4.1.3. By PG1 programmer
    - 4.2. 2. Master/Slave setup
        - 4.2.1. By monitor menu
    - 4.3. 3. Auto call back
5. User personalization setup
    - 5.1. 1. Adjust ringtone volume
    - 5.2. 2. Change ringtone melody
6. Operation
    - 6.1. 1. Status setup (Do Not Disturb)
    - 6.2. 2. Accept calling
    - 6.3. 3. Monitor door station
    - 6.4. 4. Intercom call / Inner call
    - 6.5. 5. Operating the light thought DT-RLC/Mini RLC
7. Restore Factory Setting
8. Precautions
9. Specification
10. Documents / Resources
    - 10.1. Other ManualsLib Projects

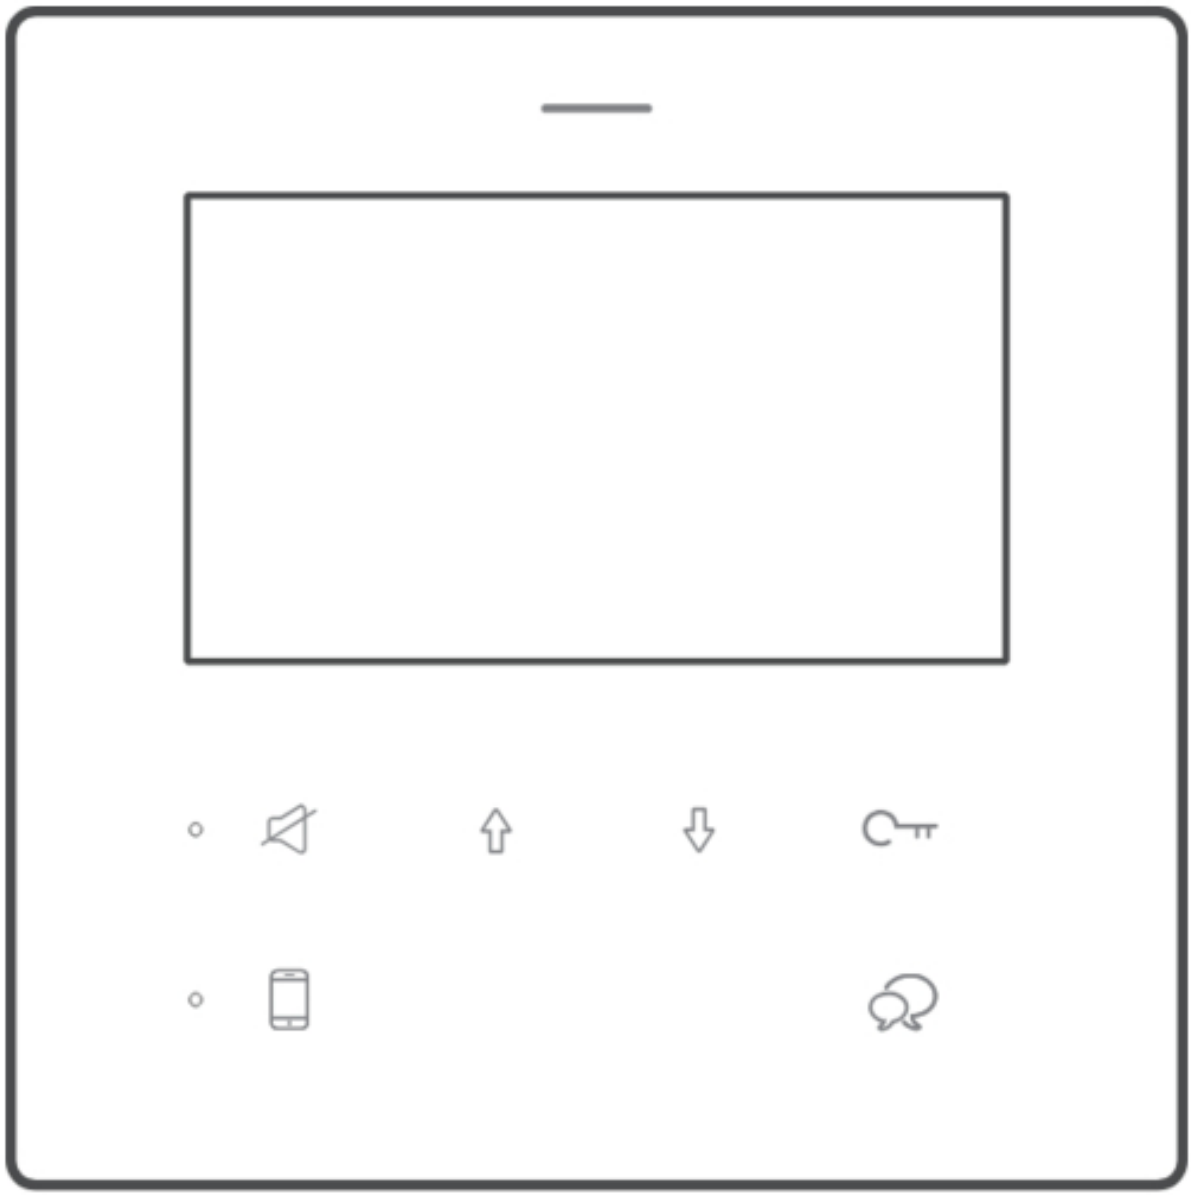

Parts and function

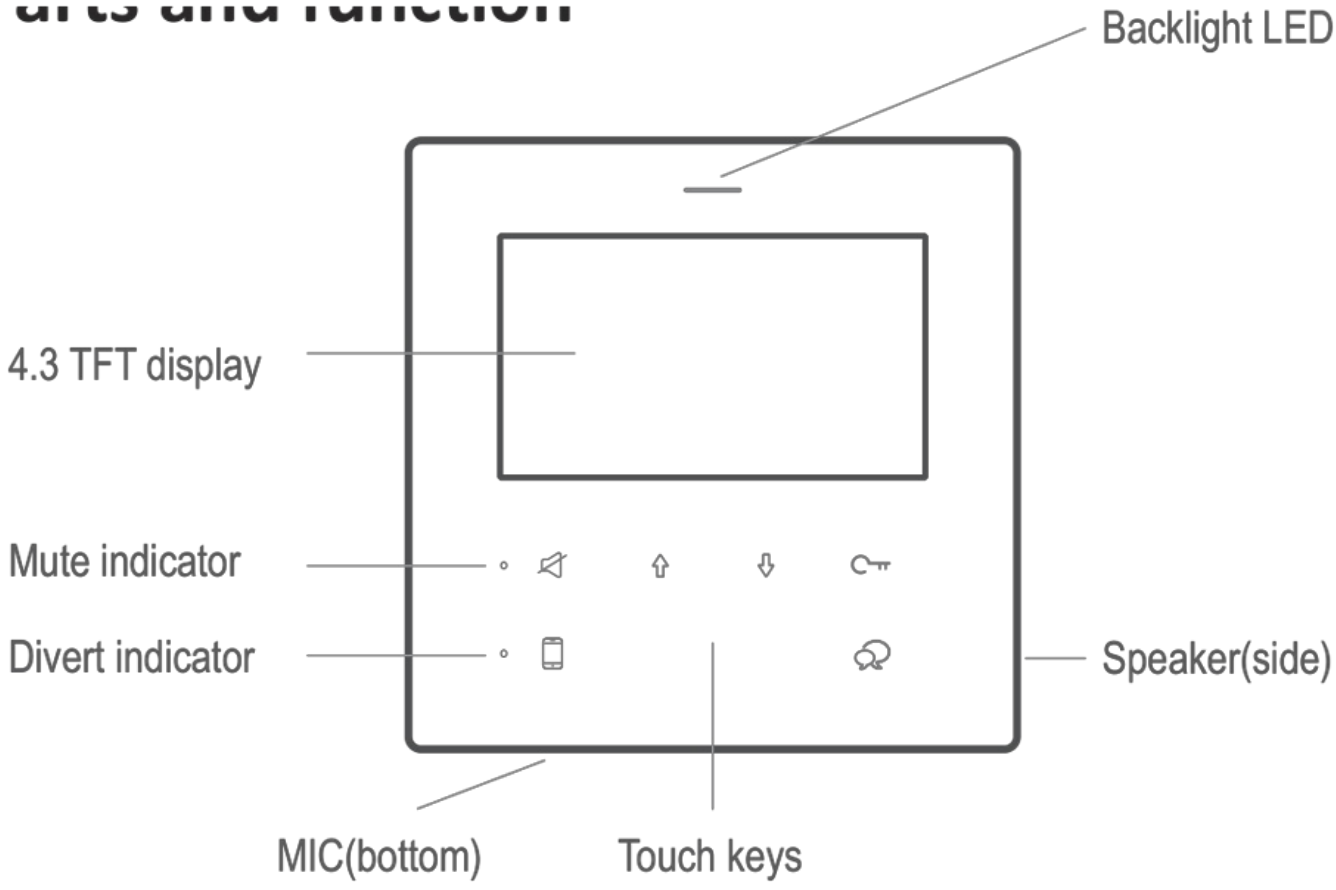


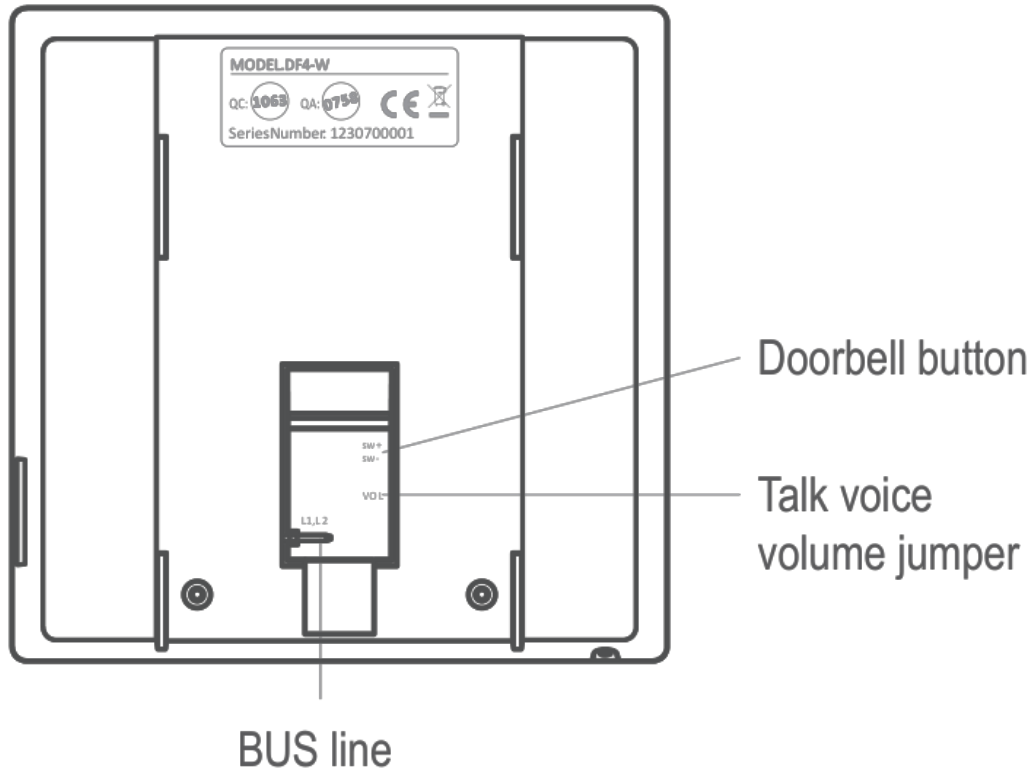




Talk voice volume jumper: the volume of the speaker voice when talk with door station, plug in means high, remove means low.

Connections

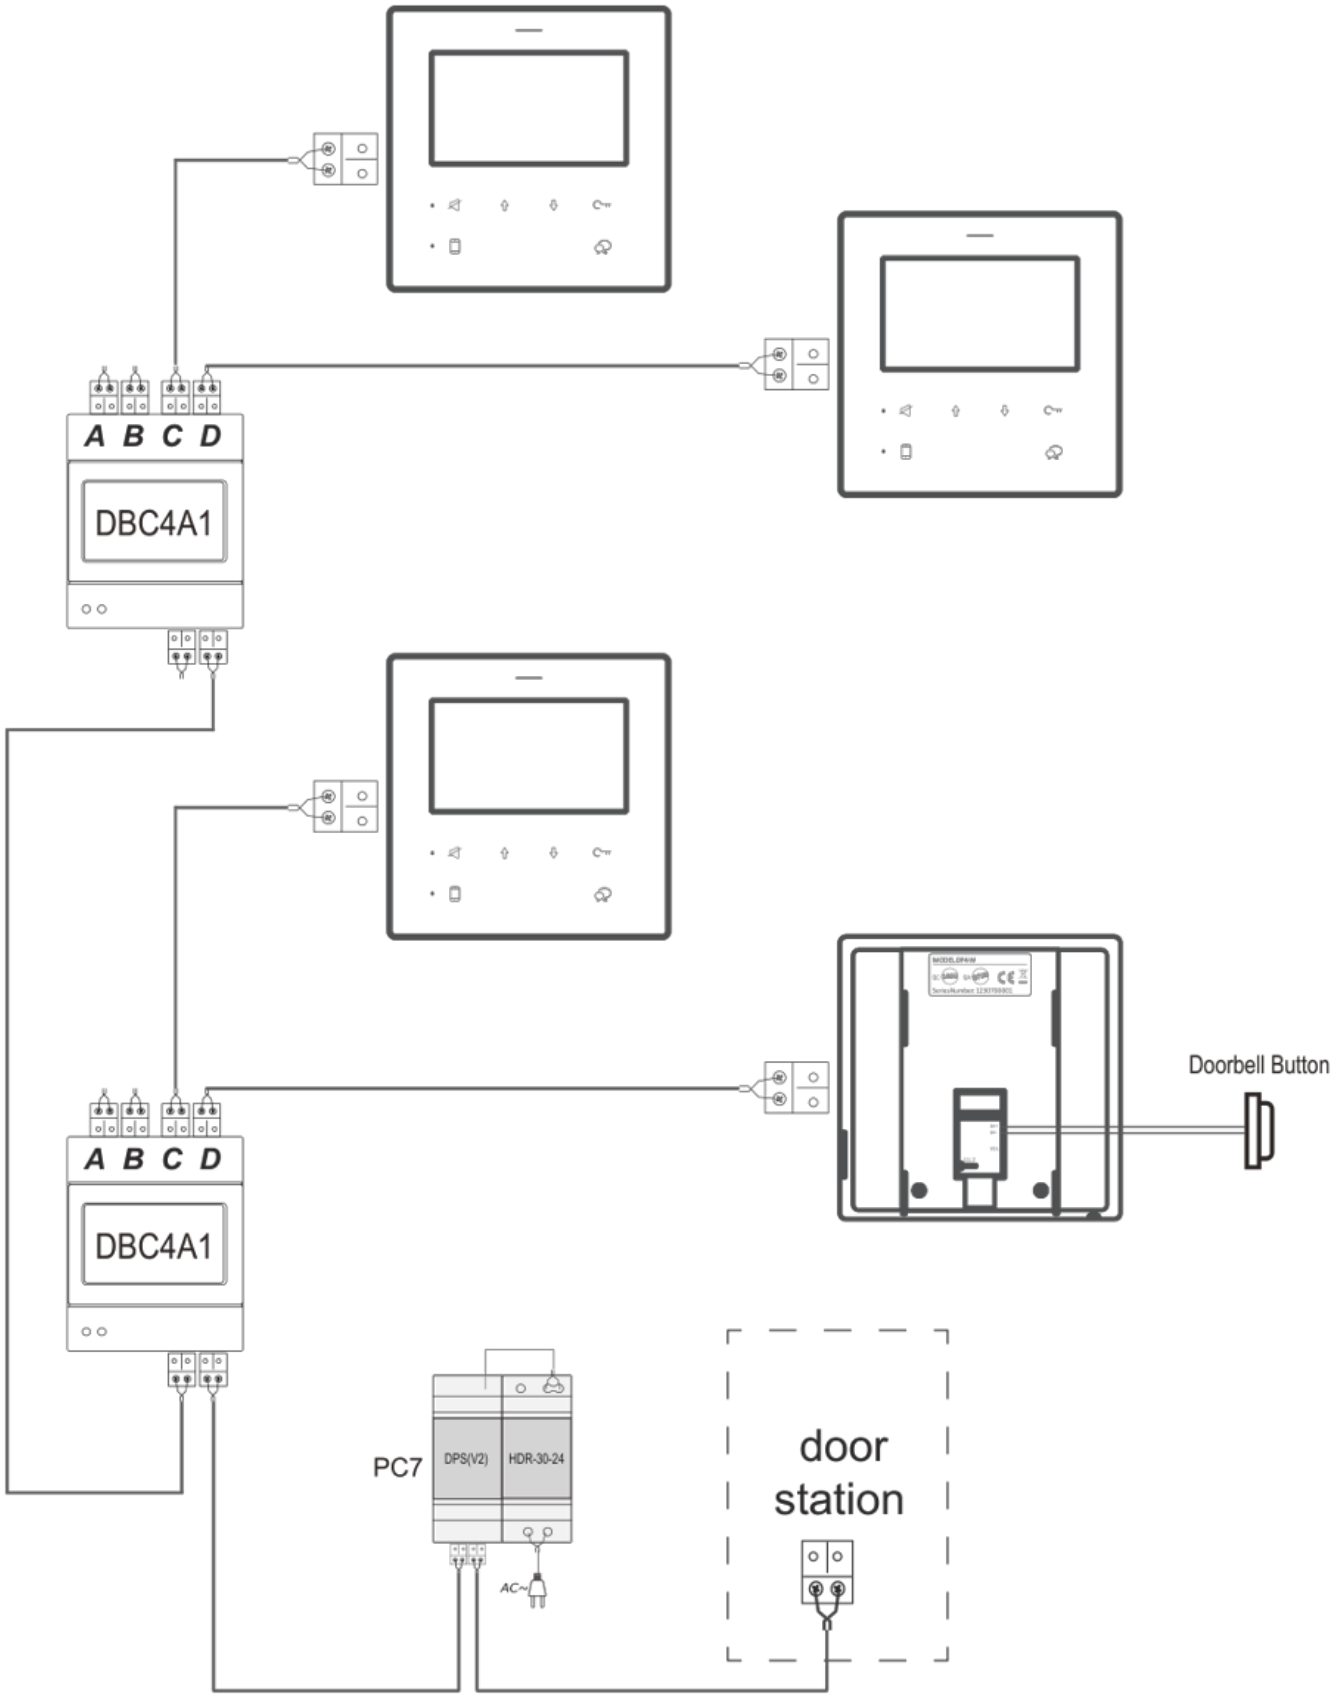

NOTICE: the DF4 monitor does not support DT-IPG, RLC light mode requries update RLC to support.
DF4 monitors does not support in-out connection.

Mounting

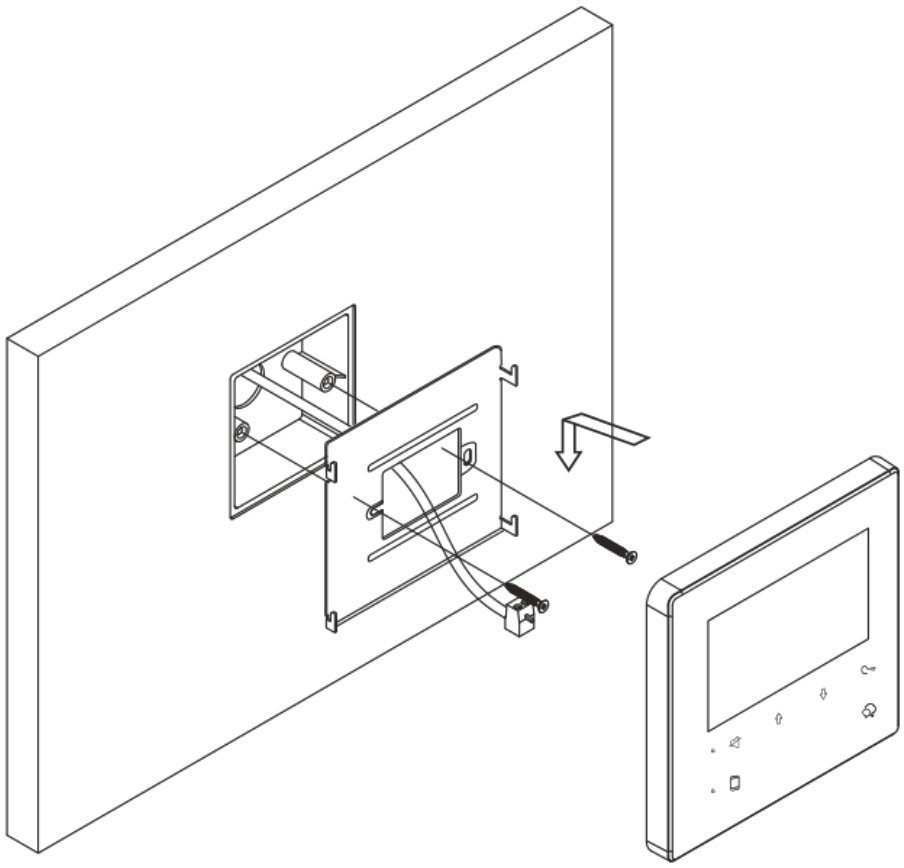


Installation Setup

1. Address setup


By monitor menu

a. Tap ⇩ or ⇧ or 🔑 ,to get into main menu
b. In main menu, long press unlock key
c. Tap ⇧ (refers 📍) to set monitor address
d. Tap ⇩ (refers 🔗) to set monitor master slave

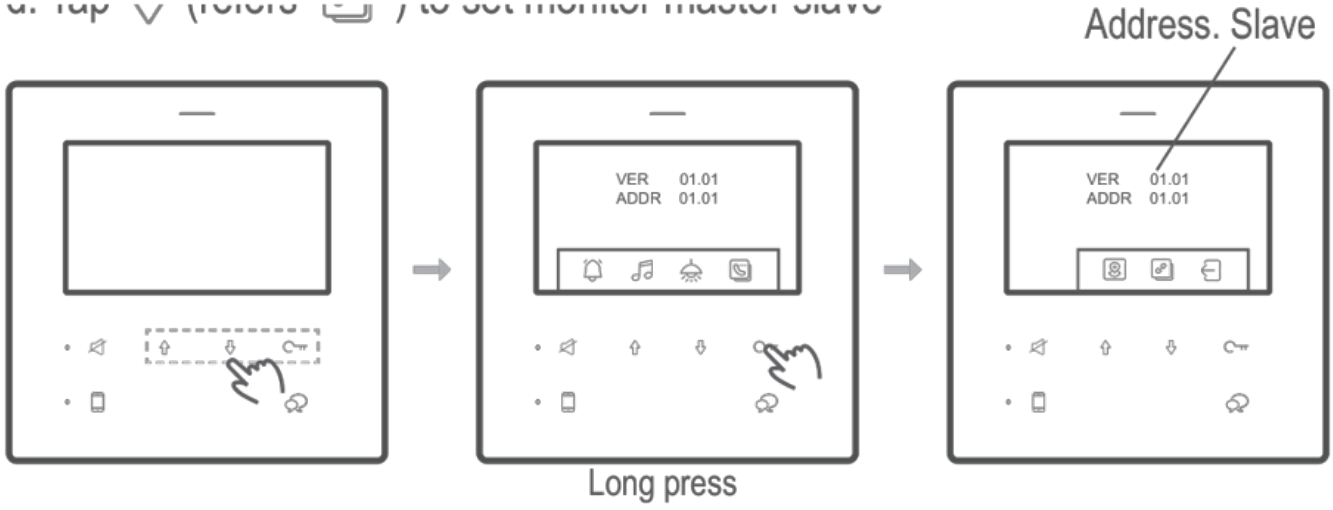


By call activate

a. When power up and standby (DF4 is screen off), press and hold for 6s until flashes.

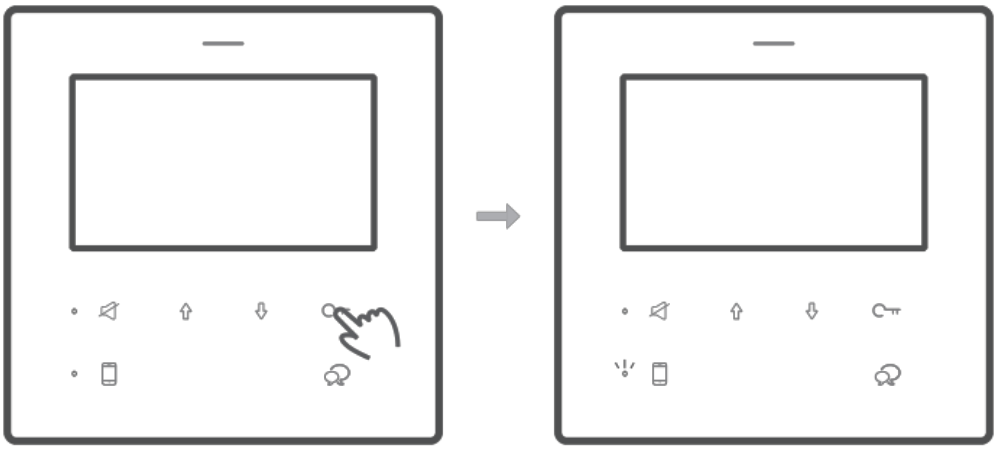

b. Call from door station with designed address, to activate the address..

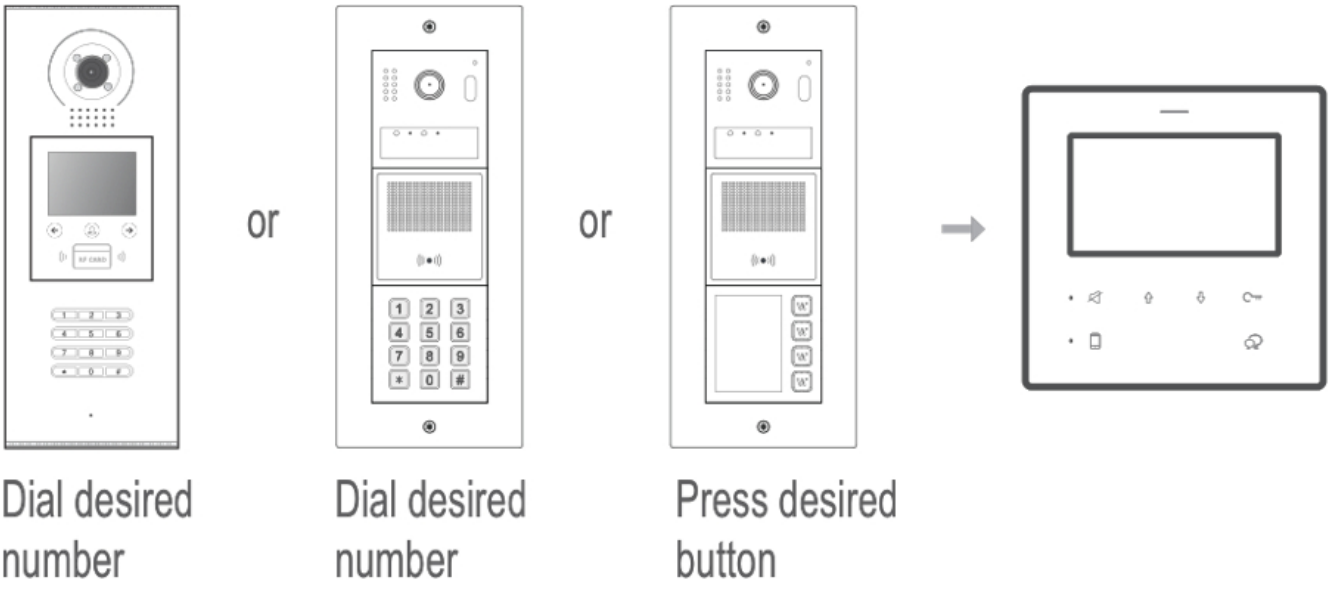

By PG1 programmer

Refer PG1 programmer manual


2. Master/Slave setup

By monitor menu

Refer address setup step 1

3. Auto call back


After 1 and 2 setups, DF4 can apply a calling from DF4, simulator a call from door station.
When power up and standby (DF4 is screen off), press and hold for 3s until led flashes.

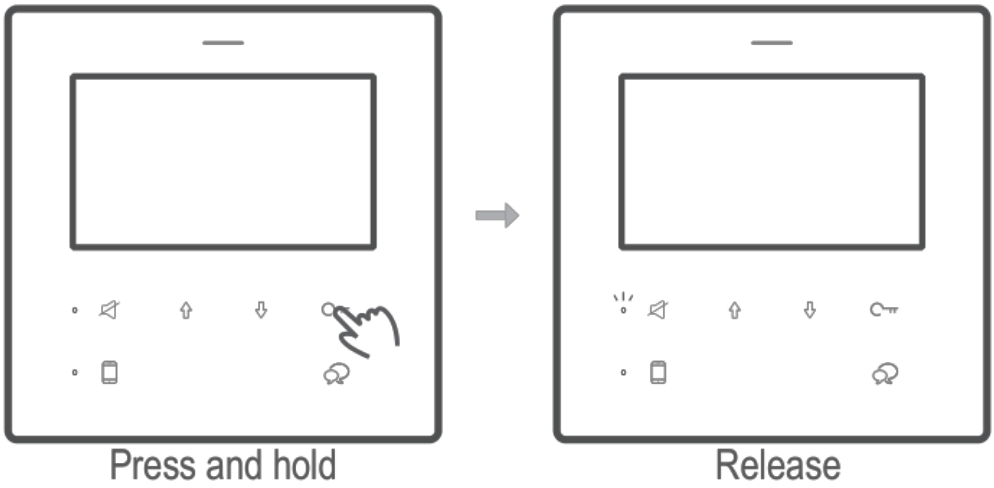

User personalization setup


1. Adjust ringtone volume

2 levels adjustable. When standby, into main menu, tap refers to switch the volume between large and small.

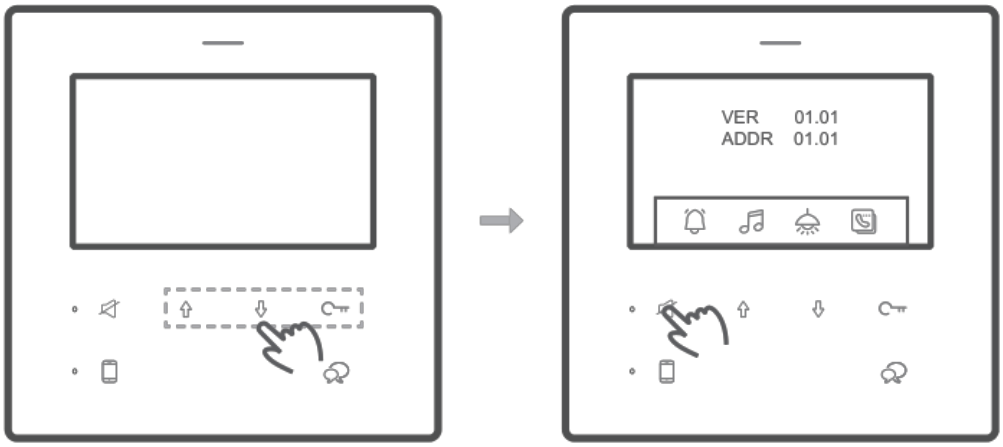

2. Change ringtone melody

3 sets of the ring tune selectable. When standby, into main menu, tap (refers)to switch the melody between 3 sets, after switch DF4 will play the melody for door station calling, inner call, and ring button separately.

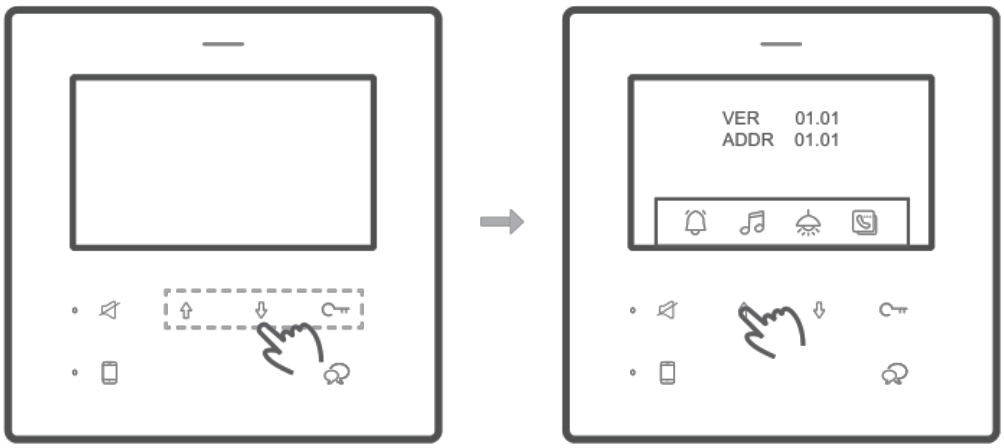

Operation

1. Status setup (Do Not Disturb)

When power up and standby (DF4 is screen off),:
Tap to enable "Do Not Disturb", the corresponding LED solid on mean the is in Do Not Disturb and will not ring for any calls.
Tap to enable/disable "Divert to APP".
*(*Reserve function, requires additional accessary or specific door station to enable, not working for 2easy standard door station.)*

2. Accept calling

When DF4 rings,

Tap to accept calling.

Tap (refers) to release door lock 1

Tap (refers) to release door lock2


Tap (refers) to adjust brightness of the image, 2 levels.

Tap (refers) to switch to other door station camera(if has)




3. Monitor door station

When power up and standby (DF4 is screen off), or in main menu, tap to start monitoring door station 1.
In monitoring check "Operation, point 2) for operations.

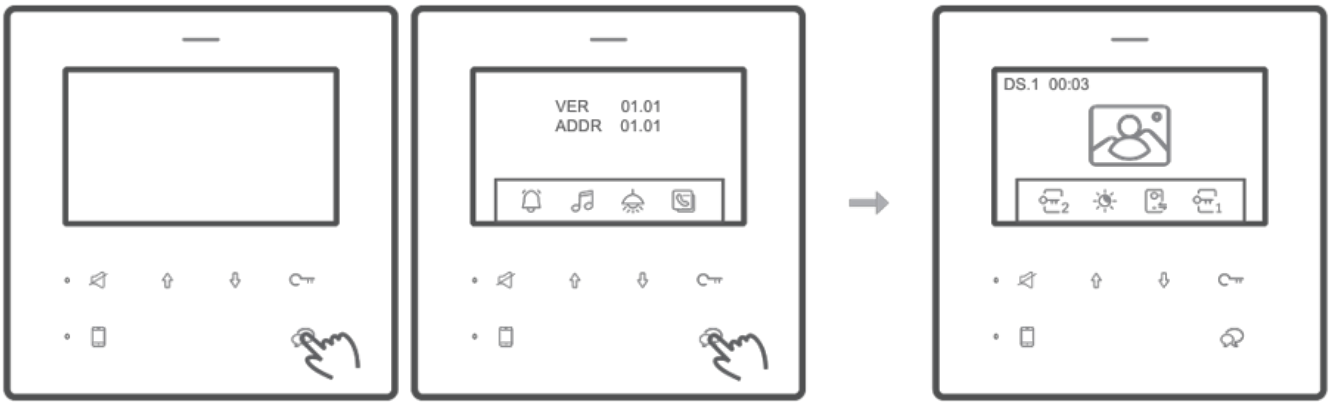


4. Intercom call / Inner call

When power up and standby (DF4 is screen off), into operate menu, tap refer to get into intercom/inner call menu.

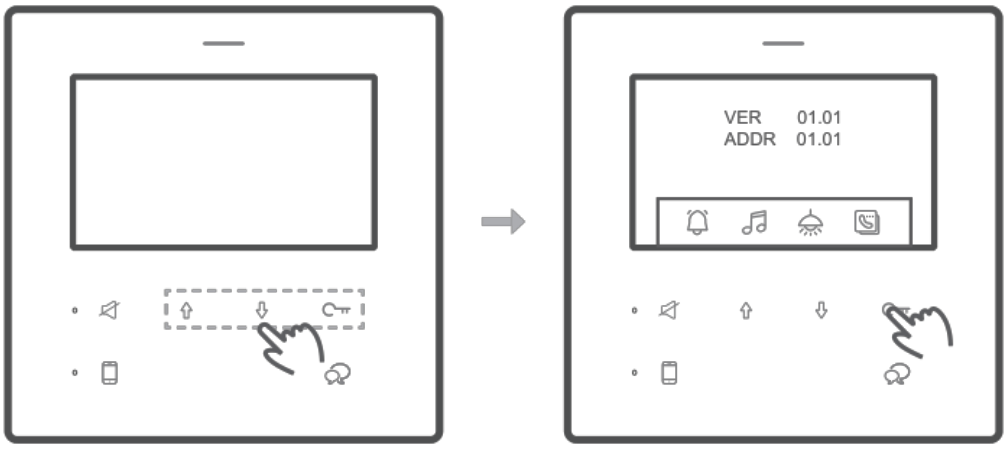


And use and to scroll to the address needs to call and tap to call, tap again to end calling.

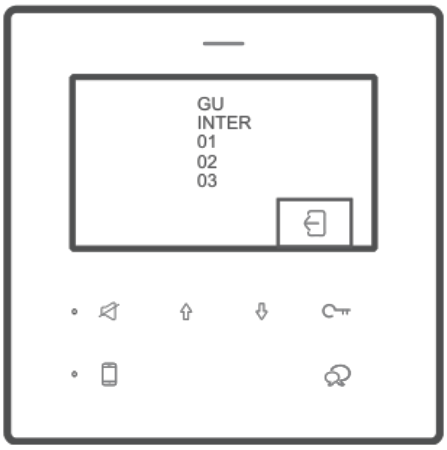

GU: to Guard Unit.
INNER: to monitor with the same address.

5. Operating the light thought DT-RLC/Mini RLC

When power up and standby (DF4 is screen off), into main menu, tap refer to light up RLC's light. When the icon turns in yellow means light up

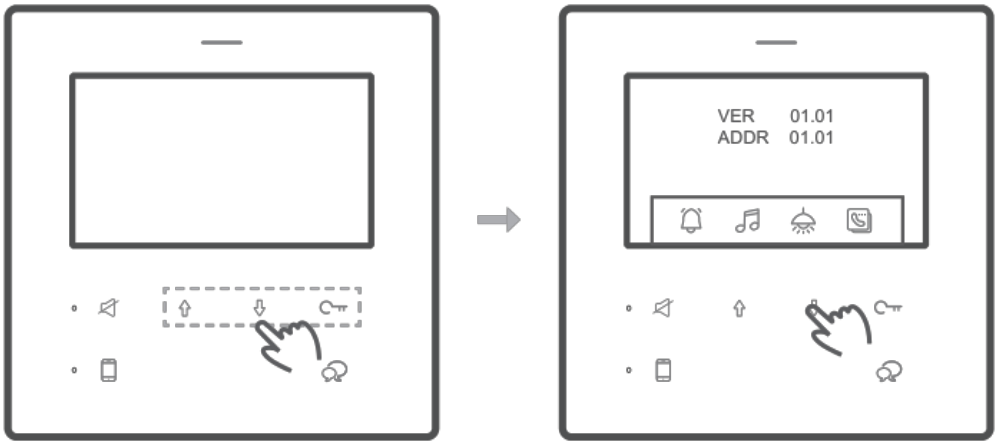

NOTICE: limit support on DT-RLC(with only DT607/608/821,DMR18S)

Restore Factory Setting

To restore to the factory default settings, by following steps.
1.Disconnect the DF4 from bus line, wait for 30s, and connect to bus line.
2.Within 10s power up, press and hold for 12s, release when and LED flashes.
3.A long beep means all setting rest to factory default


Address will remain while the master/slave will restore

Precautions


1. All components should be protected from violence vibration. And not allow to be impacted, knocked and dropped.
2. Please do the cleanness with soft cotton cloth, please do not use the organic impregnant or

chemical clean agent. If necessary, please use a little pure water or dilute soap water to clean the dust.
3. Image distortion may occur if the video monitor is mounted too close to magnetic field e. g. Microwaves, TV, computer etc.
4. Please keep away the monitor from wet, high temperature, dust, caustic and oxidation gas in order to avoid any unpredictable damage.
5. Must use the right adaptor which is supplied by the manufacturer or approved by the manufacturer.
6. Pay attention to the high voltage inside the products, please refer service only to a trained and qualified professional.


Specification

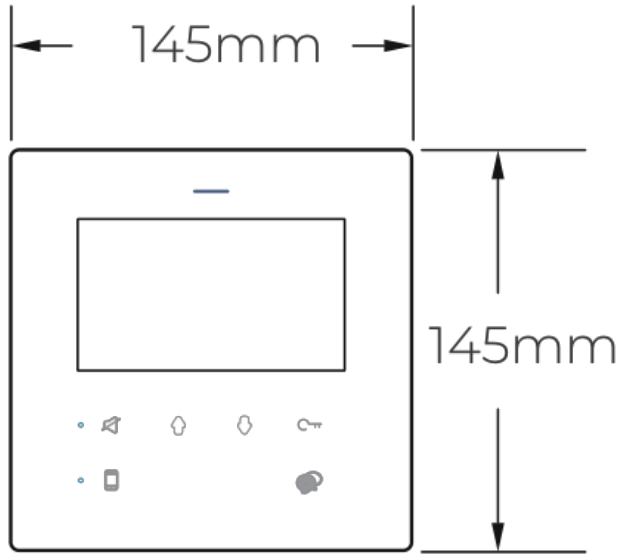


DF4-W

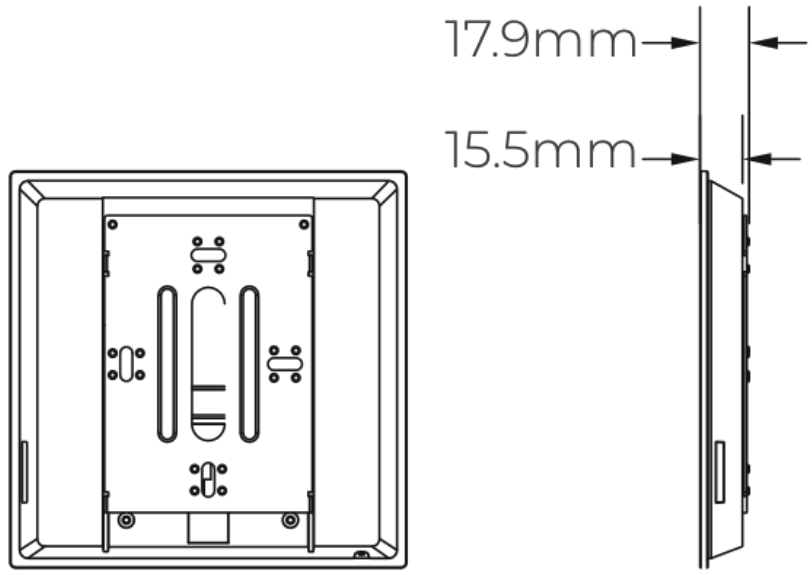

DF4-B

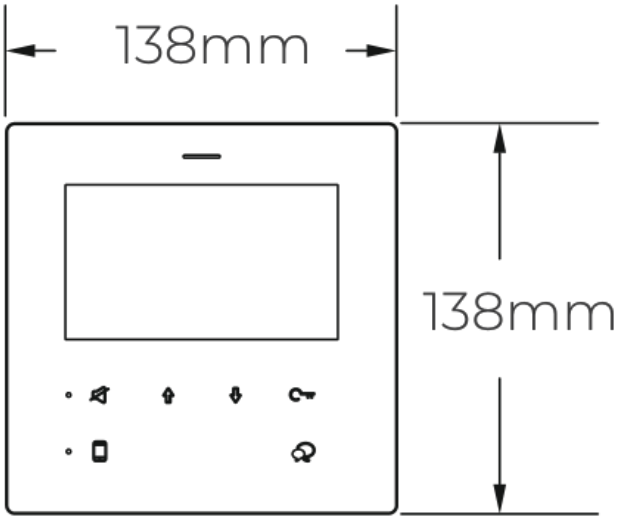

DF4-WS

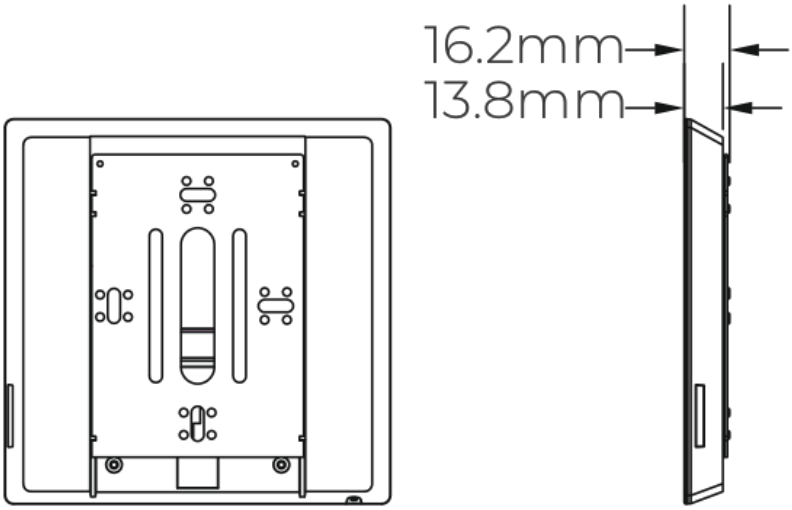

DF4-BS

Power Supply: DC20 ~28 V
Power Consumption: standby 9mA,working 150mA
Working Temperature: -15ºC ~ +55ºC;
Wiring: 2 wires, non-polarity
Monitor screen: 4.3 Inch digital color LCD
Operation Dimension:
DF4-W, DF4-B:145*145*15.5mm(not include the metal support)
DF4-WS, DF4-BS:138*138*13.8mm(not include the metal support)

Documents / Resources

Other ManualsLib Projects

- www.manualslib.com
- www.manualslib.de
- www.manualslib.es
- www.manualslib.fr
- www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ languages